



Wire intercom

Model No. CM-810,800S





CM-810



CM-800S

COMMAX Co.,Ltd.

513-11, Sangdaewon-dong, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea Int'I Business Dept. : Tel.; +82-31-7393-540~550 Fax.; +82-31-745-2133

Web site : www.commax.com

Printed In Korea / 2008. 11

COMMAX Co.,Ltd.

- Thank you for purchasing COMMAX products.
- Please carefully read this User's Guide (in particular, precautions for safety)
 before using a product and follow instructions to use a product exactly.
- The company is not responsible for any safety accidents caused by abnormal operation of the product.

Contents

1.	Greetings	1
2.	Warnings and caution	2
3.	Part name and its functions	4
4.	Operation	5
	Operation Wring Method	

	Instructions for users
Level-B product	The product is registered for electromagnetic compatibility for household use and can be used in all areas including residential areas.




Thank you for purchasing our Commax product.


☐You should read this user's manual carefully before operating the unit. ☐This common method H/A system provides residents of apartment buildings with safety and convenience based on various built-in functions that protect homes from disasters such as crimes, natural disasters, etc.

1

2. Warnings and caution


Please follow the things described below in order to prevent any danger or property damage.

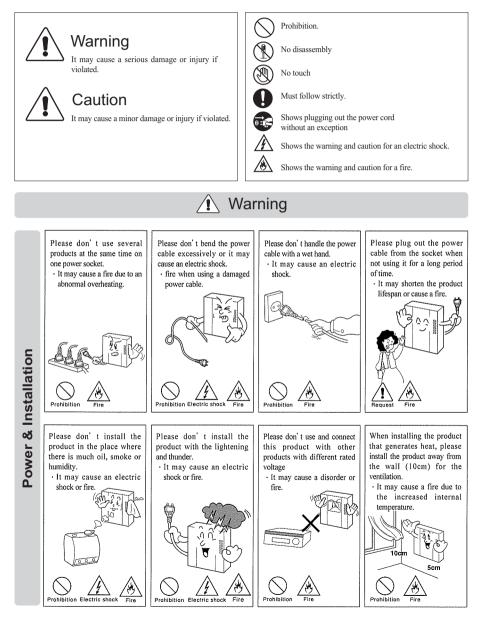

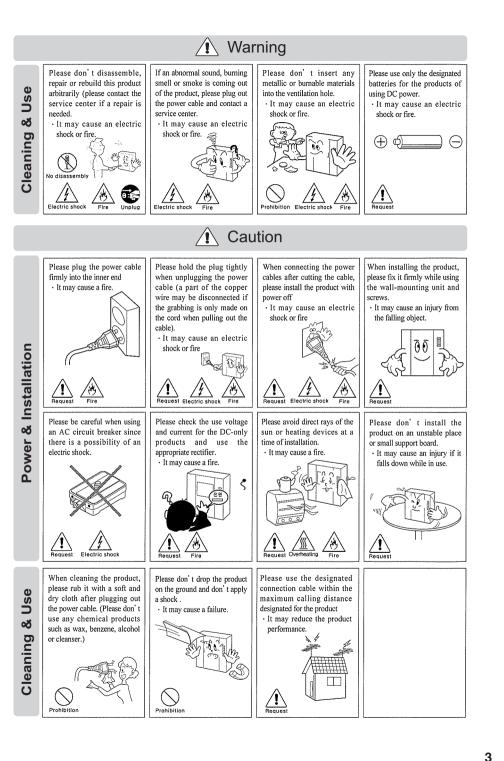

2

3. Part Name and its functions

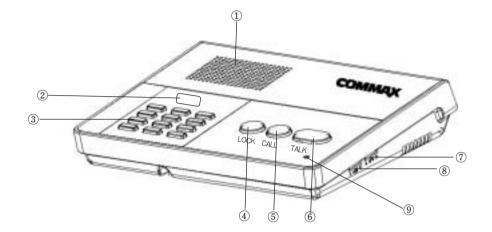


3-1 CM-810 Parts Name

NO	Description
1	Speaker
2	Display
3	Ten-key
4	LOCK(Priority Call)
5	CALL
6	TALK
7	Volume Control Dial
8	Call Sound Volume Control Dial.
9	MIC

- Volume Control Dial: it is to adjust the voice level from CM-800S.
- Ring Sound Volume Control Dial.: it is to adjust the ring sound level from CM- 800S.

This product is open voice type.

Pressing "Talk" button will start communication and then pressing "Talk" again will end it.

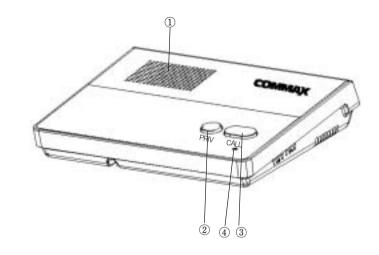

3-2 CM-800S Part Names

NO	Description
1	Speaker
2	Privacy Button
3	CALL Button
4	C-MIC



4-1 CM-810

** Making a call to CM-800S.

1) Press the desired number of CM- 800S to talk and then" #"button. The" beep" ound is heard.

Ex) paging first CM- 800S: "1+ # (beep)"

- Wrong number makes" Error" sound. (t" available from 1 to 10)

- Pressing" *" button to conceal the registration of wrong number.

2) After the communication line is opened, pressing the "all" button to make a ring.

Ex) Paging first CM- 800S: "1 + # (beep)" + "all" button.

- During keep pressing" all" button only, there is a ring.

1

5

- 1) When you receive a call from other unit during talk, other unit's number is displayed.
 - Press" #'button twice if you want to talk with other unit.
 - Ex) when you receive a call from No.2 unit during talking with No.1, No.2 is displayed. Press" #" to end the talk with No.1 unit and start to talk with No.2 unit.

** Public Notice function.(ALL CALL)

1) It is to use to make a public notice from CM- 810 to CM- 800S. Ex) Press 0" and then" #" to open all the lines of CM- 800S.


** Setup for CM-810. (Master Unit)

- 1) Choice of the ring type out of two.
- 2) Setup Ring-time duration
- It is available to set ring-time when CM-810 receives a call from CM- 800S (from 1 to 20 Seconds).
- 3) Setup Method. (Ring type and ring-time duration).
- Setup mode : Hold" *"button for 2 seconds and release it in standby mode
- Setup ring type out of two.
- " SD" sign and the number of unit in use blink in turn on the display when set-up mode is in.
- Select 1 or 2 from Ten Key and then" #" to move on to ring- duration setup mode with saving.
- Press" *"button to move on to ring duration setup mode without saving.
- Setup ring-duration
- It is to setup the time of ring-duration of CM-810.
- -" tE" sign and the number of CM- 800S in use blinks in turn on the display.
- It is available to setup duration time from 1 to 20 seconds using ten- key.
- Press" #" button after enter the time.
- And then it becomes standby mode automatically.
- Press" *"button to be out without saving.
- * Wrong registration makes" beep sound.

4-2 CM-800S (Sub-Unit)

- 1) Pressing the call button makes ring.
- 2) You can talk with CM-810 without any operation of CM-800S.
- 3) Pressing" privacy" button to stop delivering the voice from CM- 800S to CM- 810.



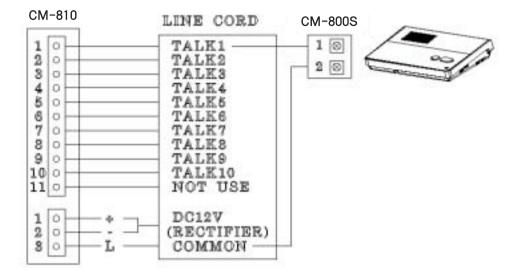

CM-810 connecting terminal in rear side.

- 5-1 Wiring.
- -" Line Cord" is used for wiring of CM-810.
- 1) 11P terminal : connect to LINE CORD 11P CONNECTOR.
- 2) 3P terminal : connect to LINE CORD 3P CONNECTOR.
- 4) Power : Power source, DC 12V is connected with LINE CORD.
- 5) CM-800S : connect to LINE CORD with 2 wires. (Max. of 300m)
- ** 12V, Trans type should be used as power source.

6. Specification

Item	Description
Wiring	To CM-800S : 2 wires (talk 2)
Rated Voltage	DC12V/ 1A
Transmission way	Half-Duplex
Display	-
Consumption	Standby: 60mA
	Max. : 370mA
Distance	CM810 - CM-800S : Max. 300m / (ø0.65mm)
Working temperatue	10°C -40°C